

Replacement Parts Selection Guide

SELECTION GUIDE				060	070	300						400	500					730	740	750	760	770	790			950	
				61-065	61-076	61-327	61-337	61-340	61-342	61-347	61-357	61-486	61-521	61-532	61-534	61-547	61-557	61-737	61-744	61-747	61-757	61-765	61-775	61-795	61-796	61-797	TR-955
FUSES																											
F-105		1A (600V)	10.3 x 35mm																								
	F-340	0.5A (500V)	6.35 x 32mm					•																			
F-341		10A (1000V)	10 x 38mm					•																			
F-337P		400mA (600V)	6.5 x 32mm																								
		10A (600V)	10 x 38mm																								
F-347-357P		600mA (1000V)	6.5 x 32 mm							•																	
		11A (1000V)	10 x 38mm							•																	
F-497		600mA (1000V)	10 x 35mm									•															
F-498		11A (1000V)	10 x 38mm									•															
F-797		315mA (1000V)	5 x 32mm																								•
BATTERIES																											
		AA																							•		•
—		1.5V (AAA)					•			•								•		•	•						
—		9V											•		•						•						
		LR44																									
TEST LEADS																											
TL-796		Earth Resistance Lead Set																							•		
TL-797RP		Remote Probe Test Lead																								•	
61-070		Standard Test Leads		•																							
TL-757		Universal Test Leads & Alligator Clips			•	•				•								•	•	•	•	•	•				
TL-521		Test Lead Set											•														
TL-795		Test Leads w/Alligator Clips (Premium)																							•		
TL-956		Test Lead Set																									•