

Replacement Parts Selection Guide

SELECTION GUIDE				060	070	300						400	500					730	740	750	760	770	790			950		
FUSES				61-065	61-076	61-327	61-337	61-340	61-342	61-347	61-357	61-486	61-521	61-532	61-534	61-547	61-557	61-737	61-744	61-747	61-757	61-765	61-775	61-795	61-796	61-797	TR-955	
F-105	1A (600V)	10.3 x 35mm																										
	0.5A (500V)	6.35 x 32mm																										
	10A (1000V)	10 x 38mm																										
	400mA (600V)	6.5 x 32mm																										
10A (600V)	10 x 38mm																											
F-347-357P	600mA (1000V)	6.5 x 32 mm																										
11A (1000V)	10 x 38mm																											
F-497	600mA (1000V)	10 x 35mm																										
F-498	11A (1000V)	10 x 38mm																										
F-797	315mA (1000V)	5 x 32mm																										
BATTERIES																												
	AA																											
—	1.5V (AAA)																											
—	9V																											
	LR44																											
TEST LEADS																												
TL-796	Earth Resistance Lead Set																											
TL-797RP	Remote Probe Test Lead																											
61-070	Standard Test Leads																											
TL-757	Universal Test Leads & Alligator Clips																											
TL-521	Test Lead Set																											
TL-795	Test Leads w/Alligator Clips (Premium)																											
TL-956	Test Lead Set																											