



U1252-X-KK-K1-PED
(shown without pedestal)

200 Amps per Position | 4 Terminals | Multi-Position | Horn Bypass | Ringless

Catalog Number	Positions	Service	Hub	Connectors CU/AL		Bypass	Dimensions		
				Line	Load		D"	W"	H"
U1252-X-KK	2	OH	C.P.	3/8" x 16 Studs	#6-350	Horn	5 $\frac{1}{8}$	26 $\frac{1}{2}$	14
U1253-X-KK	3	OH	C.P.	3/8" x 16 Studs	#6-350	Horn	5 $\frac{1}{8}$	34 $\frac{3}{4}$	14
U1254-X-KK	4	OH	C.P.	3/8" x 16 Studs	#6-350	Horn	5 $\frac{1}{8}$	42 $\frac{7}{8}$	16
U1252-X-KK-K1-PED	2	UG*	C.P.	#6-350	#6-350	Horn	5 $\frac{1}{8}$	26 $\frac{1}{2}$	14
U1253-X-KK-K3-PED	3	UG*	C.P.	#4-600	#6-350	Horn	5 $\frac{1}{8}$	34 $\frac{3}{4}$	14
U1254-X-KK-K3-PED	4	UG*	C.P.	#4-600	#6-350	Horn	5 $\frac{1}{8}$	42 $\frac{7}{8}$	16
U1255-X-KK-K4-PED	5	UG*	C.P.	(2) #2-600	#6-350	Horn	5 $\frac{1}{8}$	54 $\frac{1}{2}$	16
U1256-X-KK-PED	6	UG*	C.P.	3/8" x 16 Studs	#6-350	Horn	5 $\frac{1}{8}$	63 $\frac{1}{16}$	18

Notes

- **Knockouts:** See next page for knockout configuration information.
- **Hubs:** For proper hub selection, refer to the hub suffix chart on the accessories page. Two hub openings are supplied (5 and 6 position units only) and the extra opening is closed with a closing plate as standard. To use a hub smaller than 3 inches, the **S8324** adapter is required.
- **Fifth Terminal:** For field-installable fifth terminal, order catalog number **K5T** (9 o'clock position).
- **Connectors:** Units supplied with $\frac{3}{8}$ " -16 hex head nuts with Belleville washers on line side. Order connector kits **K1539** (350 kcmil), **K1540** (600 kcmil) or **K1541** (twin 600 kcmil).
- **Bypass:** The horn bypass is factory-installed and permits changing and testing of the meter without interrupting customer service when used with utility-supplied jumpers.

*For underground service, order the **S2291-TO** pedestal raceway. A 12-inch pedestal extension kit is also available — order catalog number **S2571**.



Please consult serving utility for their requirements prior to ordering or installing, as specifications and approvals vary by utility, and may require local electrical inspector approval. All installations must be installed by a licensed electrician and must comply with all national and local codes, laws and regulations. Milbank reserves the right to make changes in specifications and features shown without notice or obligation.