


CONTROL STATION ASSEMBLIES - CATALOG LOGIC



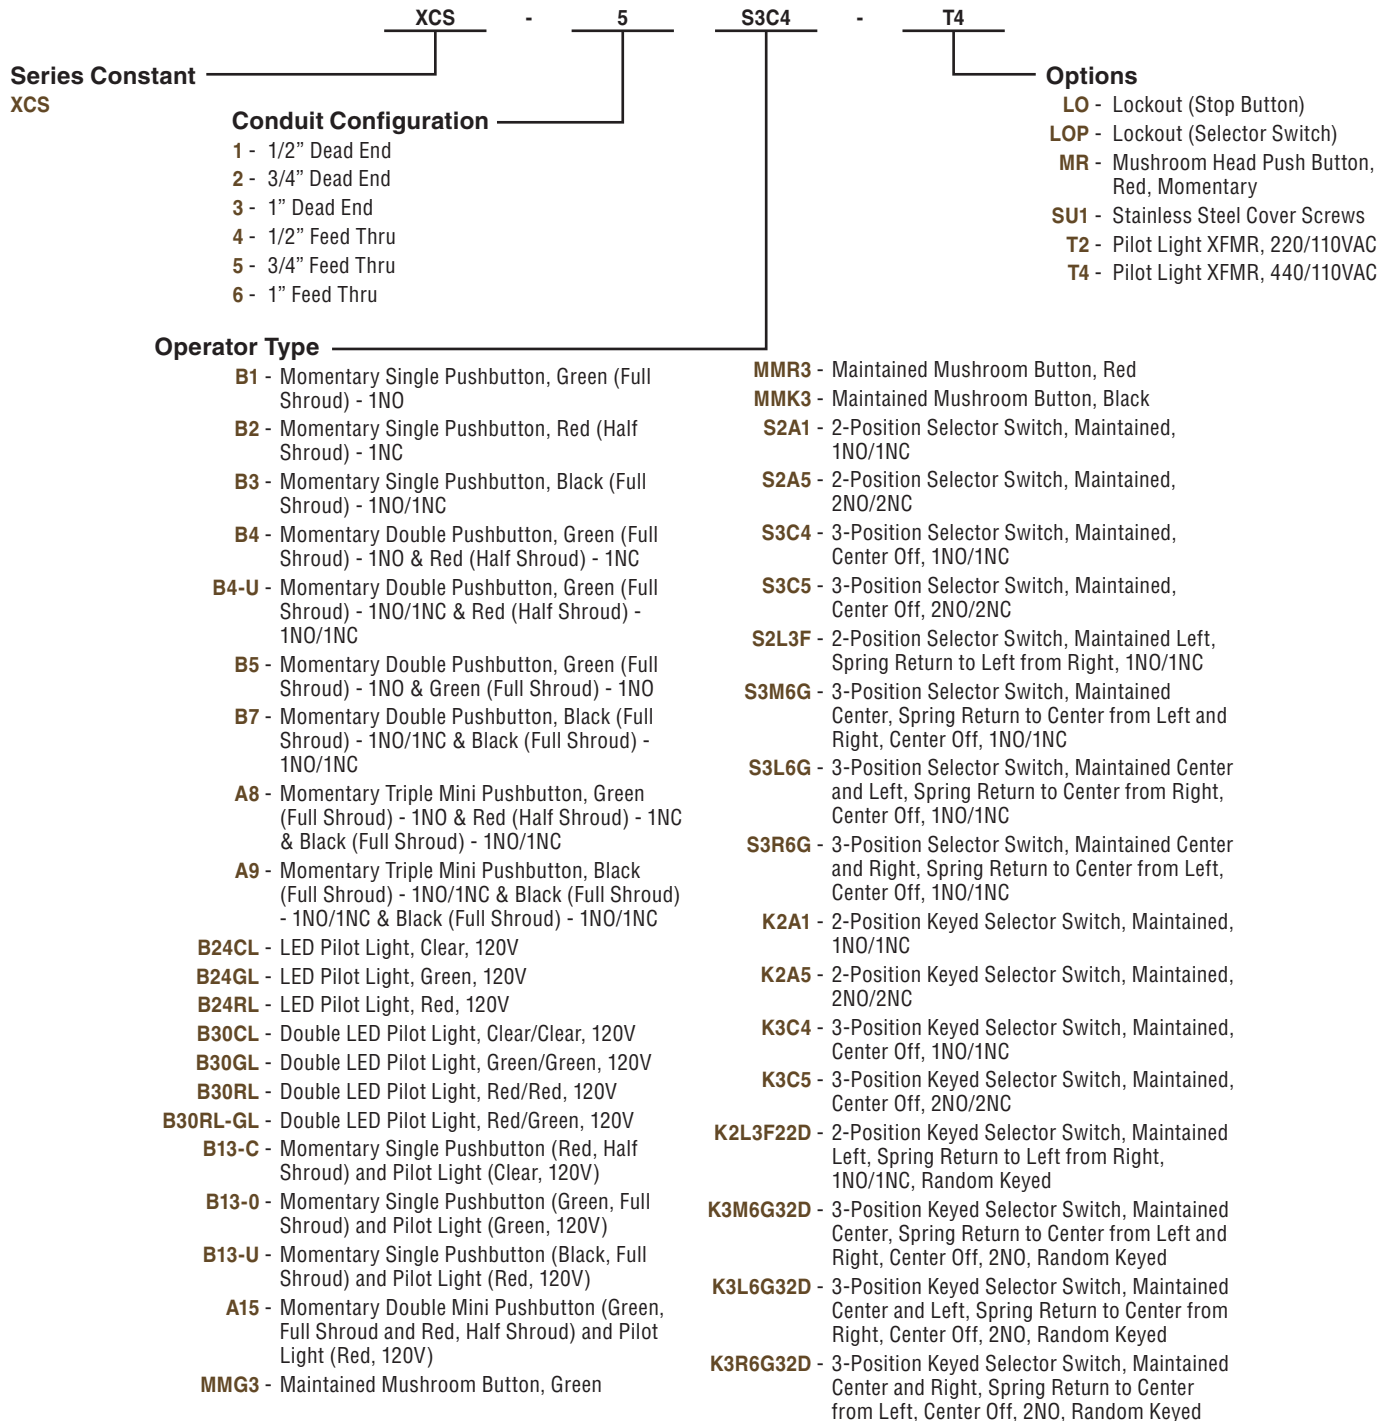

CONTROLS XCS SERIES

CONTROL STATIONS EXTERNAL SEALING REQUIRED



Single Push Button
(Box and Cover)



Double Push Button
(Box and Cover)



Three Mini-Push Button
(Box and Cover)



Push-Pull Mushroom Maintained Push Button
(Box and Cover)

XCS MOMENTARY CONTACT SINGLE PUSH BUTTON

COVER WITH DEVICE	CATALOG NUMBER		HUB SIZE	DIAGRAM	BUTTON COLOR	NAMEPLATE MARKING
	COMPLETE UNITS (BOX & COVER)					
	DEAD-END	FEED-THRU				
XCS-0B1	XCS-1B1	XCS-4B1	1/2"		Green	Start
	XCS-2B1	XCS-5B1	3/4"			
XCS-0B2	XCS-1B2	XCS-4B2	1/2"		Red	Stop
	XCS-2B2	XCS-5B2	3/4"			
XCS-0B3	XCS-1B3	XCS-4B3	1/2"		Black	Specify
	XCS-2B3	XCS-5B3	3/4"			

XCS MOMENTARY CONTACT DOUBLE PUSH BUTTON


COVER WITH DEVICE	CATALOG NUMBER		HUB SIZE	DIAGRAM	BUTTON COLOR	NAMEPLATE MARKING
	COMPLETE UNITS (BOX & COVER)					
	DEAD-END	FEED-THRU				
XCS-0B4	XCS-1B4	XCS-4B4	1/2"		Green-Red	Start/Stop
	XCS-2B4	XCS-5B4	3/4"			
XCS-0B4-U	XCS-1B4-U	XCS-4B4-U	1/2"		Green-Red	Start/Stop
	XCS-2B4-U	XCS-5B4-U	3/4"			
XCS-0B5	XCS-1B5	XCS-4B5	1/2"		Green-Green	Start/Start
	XCS-2B5	XCS-5B5	3/4"			
XCS-0B7	XCS-1B7	XCS-4B7	1/2"		Black-Black	Specify
	XCS-2B7	XCS-5B7	3/4"			

XCS MOMENTARY CONTACT THREE MINI-PUSH BUTTON

COVER WITH DEVICE	CATALOG NUMBER		HUB SIZE	DIAGRAM	BUTTON COLOR	NAMEPLATE MARKING
	COMPLETE UNITS (BOX & COVER)					
	DEAD-END	FEED-THRU				
XCS-0A8	XCS-1A8	XCS-4A8	1/2"		Green-Red	Start/Stop
	XCS-2A8	XCS-5A8	3/4"			
XCS-0A9	XCS-1A9	XCS-4A9	1/2"		Black	Specify
	XCS-2A9	XCS-5A9	3/4"			

XCS MAINTAINED CONTACT PUSH PULL MUSHROOM PUSH BUTTON

CATALOG NUMBER (COVER WITH DEVICE)	DIAGRAM	BUTTON COLOR	NAMEPLATE MARKING
XCS-0MMG3		GREEN	Three nameplates supplied (START, STOP, and EMERG STOP).
XCS-0MMR3		RED	
XCS-0MMK3		BLACK	

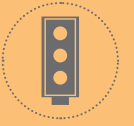

CONTROL STATIONS EXTERNAL SEALING REQUIRED



Pilot Light
(Box and Cover)



Double
Pilot Light
(Box and Cover)



Pilot Light
Push Button
(Box and Cover)



Pilot Light
Two Mini Push Buttons
(Box and Cover)

XCS PILOT LIGHT

COVER WITH DEVICE	COMPLETE UNITS (BOX & COVER)		HUB SIZE	DIAGRAM	LAMP VOLTS	LENS COLOR	NAMEPLATE MARKING
	DEAD-END	FEED-THRU					
XCS-0B24-CL	XCS-1B24-CL	XCS-4B24-CL	1/2"		120V	Clear	Specify
	XCS-2B24-CL	XCS-5B24-CL	3/4"				
XCS-0B24-GL	XCS-1B24-GL	XCS-4B24-GL	1/2"		120V	Green	Specify
	XCS-2B24-GL	XCS-5B24-GL	3/4"				
XCS-0B24-RL	XCS-1B24-RL	XCS-4B24-RL	1/2"		120V	Red	Specify
	XCS-2B24-RL	XCS-5B24-RL	3/4"				

XCS DOUBLE PILOT LIGHT

COVER WITH DEVICE	COMPLETE UNITS (BOX & COVER)		HUB SIZE	DIAGRAM	LAMP VOLTS	LENS COLOR	NAMEPLATE MARKING
	DEAD-END	FEED-THRU					
XCS-0B30-CL	XCS-1B30-CL	XCS-4B30-CL	1/2"		120V	Clear	Specify
	XCS-2B30-CL	XCS-5B30-CL	3/4"				
XCS-0B30-GL	XCS-1B30-GL	XCS-4B30-GL	1/2"		120V	Green	Specify
	XCS-2B30-GL	XCS-5B30-GL	3/4"				
XCS-0B30-RL	XCS-1B30-RL	XCS-4B30-RL	1/2"		120V	Red	Specify
	XCS-2B30-RL	XCS-5B30-RL	3/4"				
XCS-0B30RL-GL	XCS-1B30RL-GL	XCS-4B30RL-GL	1/2"		120V	Red/Green	Specify
	XCS-2B30RL-GL	XCS-5B30RL-GL	3/4"				

XCS MOMENTARY CONTACT PUSH BUTTON AND PILOT LIGHT

COVER WITH DEVICE	COMPLETE UNITS (BOX & COVER)		HUB SIZE	DIAGRAM	BUTTON COLOR	LENS COLOR	NAMEPLATE MARKING	
	DEAD-END	FEED-THRU					BUTTON	LENS
XCS-0B13-C	XCS-1B13-C	XCS-4B13-C	1/2"		Red	Red	Stop	Specify
	XCS-2B13-C	XCS-5B13-C	3/4"					
XCS-0B13-0	XCS-1B13-0	XCS-4B13-0	1/2"		Green	Red	Start	Specify
	XCS-2B13-0	XCS-5B13-0	3/4"					
XCS-0B13-U	XCS-1B13-U	XCS-4B13-U	1/2"		Black	Red	Specify	Specify
	XCS-2B13-U	XCS-5B13-U	3/4"					

XCS MOMENTARY CONTACT TWO MINI PUSH BUTTONS AND PILOT LIGHT

COVER WITH DEVICE	COMPLETE UNITS (BOX & COVER)		HUB SIZE	DIAGRAM	BUTTON COLOR	LENS COLOR	NAMEPLATE MARKING	
	DEAD-END	FEED-THRU					BUTTON	LENS
XCS-0A15	XCS-1A15	XCS-4A15	1/2"		Red	Red	Stop	Specify
	XCS-2A15	XCS-5A15	3/4"					